BLM Manual Handbook 9177-2

## Dam

CONDITION.

ASSESSMENT CHECKLIST

(PUBLIC)

BLM Manual Handbook H-9177-2, rev. September 2006

BLM manuals and handbooks are online at: http://www.blm.gov/nhp/efoia/index.htm Suggested citation: Bureau of Land Management. 2006. Dam Condition Assessment Checklist. BLM Manual Handbook 9177-2. Denver, Colorado. Release x-xxxx. 9 sheets.

BLM Manual Handbook 9177-2

### Dam

CONDITION
ASSESSMENT CHECKLIST
(Public)

NAME OF DAM:		
Geographical Data	Classification Data	Inspector Data
	Current Hazard Class (L/S/H):	Date of Inspection:
Administrative State:	Population at Risk (High Hazard Only):	Inspector Name:
Geographic State (if diff):		Weather:
County:		
Field Office:	Size Class (Minor/Small/Inter/Large):	Date of Last Inspection:
Section: T: R:	Type of Dam (if not earth):	Safety issues and warnings for inspectors:
Aliquot Part:	Condition Rating Code: 1	
Latitude at Benchmark (nearest 10th)	River/Stream Crossed:	Driving Directions to Dam:
Longitude at Benchmark (nearest 10th):	Seismic PGA (high haz only):	
Meridian:	Date Dam Constructed:	
BLM ID No.:	Date Dam Modified:	
Equip. No.:	Plan/Section Dwg No.:	

### Notes:

For High Hazard dams, note any low water crossings, private land crossings, locked gates, poor roads, etc:

Describe any development within 3 miles downstream since the last inspection. If none, write "None":

Describe any active County, State, or Federal roads, active railroads, or utilities within 3 miles downstream. If none, write "None." For County roads, list the number of vehicles per day:

<sup>&</sup>lt;sup>1</sup> Condition Rating Code (See Appendix). Give numeral (0–9) and discriptive term (good, poor,etc.).

	Calculated Data
Calc1. Hydraulic Height (D-S):	Calc7. Principal Spillway Outlet Pipe Length (T+N):
Calc2. Structural Height (B-S):	Calc8. Low-Level Gated Outlet Pipe Length (U+L):
Calc3. Minimum Freeboard (C-D):	Calc9. Estimated Max Reservoir Storage ((DD * Calc6.) / 3):
Calc4. Normal Storage Depth	Calc10. Volume of Embankment:
(E-I):	(((Calc2. `Y) ` (X + ((Calc2. `O)/2] + ((Calc2. `W)/2))) / 54)
Calc5. Actual Storage Depth (H-I):	Other:
Calc6. Maximum Storage Depth (D-I):	Other:

### Notes:

See Figure for definition of dimensions.

Indicate all dimensions in feet unless otherwise noted.

If reservoir is dry at time of inspection, actual storage depth is 0.

Datum for permanent benchmark shall be elevation 100'.

For Calc10. dimensions O and W are slope ratios and all other parameters are in feet. The answer is in cubic yards.

nspector Signature _	Date	

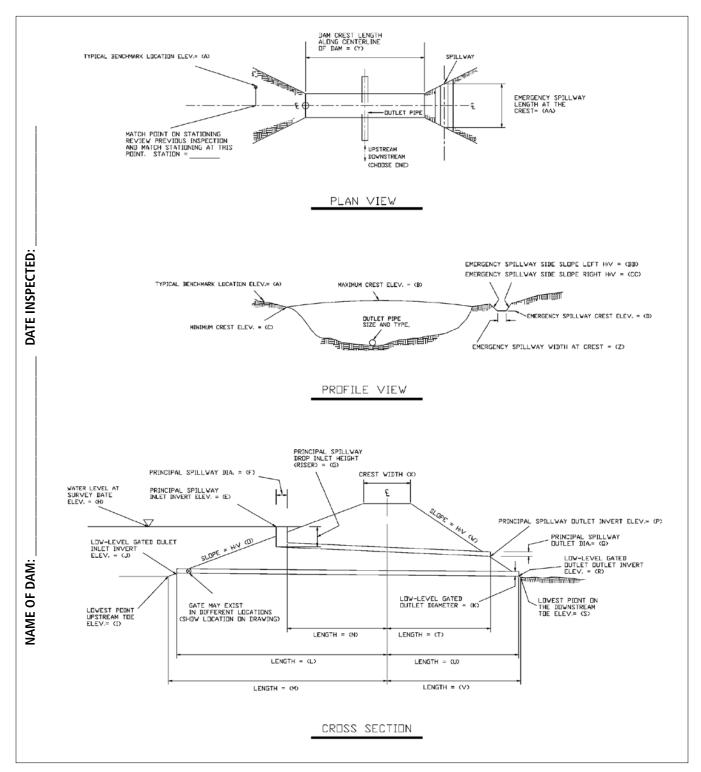


Figure. Definition of Dimensions.

### Notes:

Show location on the Plan View of Station 0+00.

Use the back of this page to draw a plan view sketch of the reservoir and dam (DD).

ı

- 1 Check the N/A, YES/NO, or Corrective Action Recommended (CAR<sup>1</sup>) columns as required.
- 2 Use the same flag number if quantities for similar items will be calculated and grouped together in the Recommended Work Summary.
- 3 Use item numbers to identify items on the Recommended Work Summary.

Item No.	Item	N/A	Υ	N	CAR <sup>1</sup> RIM	Flag No.	Remarks
	EMBANKMENT						
1.	CREST						
a.	Any visual settlements						
b.	Cracking						
C.	Lateral movement						
d.	Visible sinkhole						
e.	Erosion						
f.	Trees & brush						
g.	FAMS road on crest						
h.	Rodent holes						
2.	UPSTREAM SLOPE						
a.	Erosion						
b.	Trees & brush						
C.	Longitudinal cracks						
d.	Transverse cracks						
e.	Visual depression or bulges						
f.	Visual settlements						
g.	Visible sinkhole						
h.	Debris						
i.	Rodent holes						
3.	DOWNSTREAM SLOPE						
a.	Erosion						
b.	Trees & brush						
C.	Longitudinal cracks						
d.	Transverse cracks						
e.	Visual depressions or bulges						
f.	Visual settlements						
g.	Visible sinkhole						
h.	Boils present at toe						

Item No.	Item	N/A	Υ	N	CAR RIM	Flag No.	Remarks
i.	Seepage present						
j.	Rodent holes						
k.	Is toe drain dry						
4.	ABUTMENT CONTACTS						
a.	Erosion						
b.	Visual differential movement						
C.	Cracks						
d.	Seepage present						
e.	Trees & brush						
5.	GROIN						
a.	Erosion						
b.	Visual differential movement						
C.	Cracks						
d.	Seepage present						
e.	Trees & brush						
6.	RESERVOIR CONTROL						
a.	Recent downstream development						
b.	Slides in reservoir area						
C.	Change in reservoir operation						
d.	Other large impoundments u/s						
e.	Evidence or recreational use						
7.	INSTRUMENTATION						
a.	List any instrumentation present						
b.	Is instrumentation functional						
C.	Record measurements						
(see page 5	8 of <b>Dam Condition Assessment Guide</b>	elines for	Embankm	ent Dams)-	—EMBANK	MENT SAF	FETY RATING:
PRINCI	PAL SPILLWAY OR OUTLET						
8.	INTAKE STRUCTURE						
a.	Debris present						
b.	Concrete surface condition						
(1)	Spalling						
(2)	Cracking						
(3)	Erosion						
(4)	Scaling						
(5)	Exposed reinforcement						
(6)	Other, list						

Item No.	Item	N/A	Υ	N	CAR RIM	Flag No.	Remarks
C.	Joint condition						
(1)	Displacement or offset						
(2)	Loss of joint material						
(3)	Leakage						
d.	Metal appurtenances						
(1)	Corrosion present						
(2)	Breakage present						
(3)	Anchor system secure						
9.	CONDUIT						
a.	Is conduit concrete						
b.	Concrete surface condition						
(1)	Spalling						
(2)	Cracking						
(3)	Erosion						
(4)	Scaling						
(5)	Exposed reinforcement						
(6)	Displacement or offset						
(7)	Leakage						
(8)	Other, list						
C.	Metal conduit condition						
(1)	Corrosion present						
(2)	Protection coating adequacy						
(3)	Conduit misalignment						
(4)	Leakage						
d.	Plastic conduit condition						
(1)	Displacement or offset						
(2)	Leakage						
(3)	Crushed or broken						
e.	Conduit trashrack condition						
(1)	Operational						
(2)	Plugged						
(3)	Corrosion or damage present						
10.	GATES						
a.	Flood gate condition						
(1)	Broken or bent						
(2)	Corroded or rusted						

Item No.	Item	N/A	Υ	N	CAR RIM	Flag No.	Remarks
(3)	Regularly maintained						
(4)	Gates operational						
C.	Is there a low-level gate						
d.	Is low-level gate operational						

(see page 54 of *Dam Condition Assessment Guidelines for Embankment Dams*)—PRINCIPAL SPILLWAY or OUTLET WORKS SAFETY RATING:

EMERGE	ENCY SPILLWAY or OUTLET WORKS			
11.	STILLING BASIN			
a.	Concrete surface condition			
(1)	Spalling			
(2)	Cracking			
(3)	Erosion			
(4)	Scaling			
(5)	Exposed reinforcement			
(6)	Other, list			
b.	Joint condition			
(1)	Displacement or offset			
(2)	Loss of joint material			
(3)	Leakage			
C.	Energy dissipater condition			
(1)	Deterioration			
(2)	Covered with debris			
(3)	Other, list			
d.	Channel condition			
(1)	Eroding or backcutting			
(2)	Sloughing			
(3)	Obstructed			
(4)	Undercut by released water			
(5)	Embankment erosion by water			
e.	Gabion condition			
(1)	Corroded			
(2)	Basket misaligned			
(3)	Basket settlement			
(4)	Brush growing in gabions			
f.	Riprap condition			
(1)	Erosion undercut or settlement			

Item No.	Item	N/A	Υ	N	CAR RIM	Flag No.	Remarks
(2)	Vegetation						
(3)	Extent of riprap adequacy						
(4)	Migration of riprap						
12.	SPILLWAY or OUTLET WORKS						
a.	Spillway concrete condition						
(1)	Spalling						
(2)	Cracking						
(3)	Erosion						
(4)	Scaling						
(5)	Exposed reinforcement						
(6)	Concrete undercut						
(7)	Settlement						
(8)	Other, list						
(9)	Trees and brush—obstructed						
b.	Joint condition						
(1)	Displacement or offset						
(2)	Loss of joint material						
(3)	Leakage						
C.	Energy dissipater condition						
(1)	Signs of deterioration						
(2)	Covered with debris						
(3)	Riprap dissipater						
(4)	Missing						
d.	Excavated earth spillway condition						
(1)	Slopes eroding						
(2)	Slopes sloughing						
(3)	Headcutting						
(4)	Trees and brush—obstructed						
e.	Natural earth spillway condition						
(1)	Slopes eroding						
(2)	Slopes sloughing						
(3)	Headcutting						
(4)	Trees and brush—obstructed						

Item No.	ltem	N/A	Υ	N	CAR RIM	Flag No.	Remark	ζς
f.	Damage from released water							
(1)	Eroded embankment							
(2)	Undercutting of outlet							
(3)	Recent discharge							
(4)	Other damage, list							
g.	Is weir in good condition							
h.	Is control at weir							
(see page RATING:	e 56 of Dam Condition Assessment G	uidelines fo	r Embai	nkment	Dams—E	MERGENC	Y SPILLWAY or OUTLET W	ORKS SAFETY
OVERALL	SAFETY RATING:	See pag	e 60 of	Dam Sa	afety Inspe	ection Repo	ort Guidelines for Embankn	nent Dams
	OR (M) OR "NO" IF NO CORRECT ACT			NT? EXF	PLAIN:			
OTHER REI	MARKS / NOTES FOR PHOTOS:							

CKLIST	DATE INSPECTED:	List Flag Numbers from checklist and comment as	quantities, and enter totals on Summary.		
DAM CONDITION ASSESSMENT CHECKLIST	NAME OF DAM:	CALCULATIONS	NOTE: Recommended work items listed below were discovered during the field inspection.		Inspector Signature

KLIST	DATE INSPECTED:	RY	REMARKS								÷
DAM CONDITION ASSESSMENT CHECKLIST		RECOMMENDED WORK SUMMARY	UOM3								Capital Improvemen
V ASSES!		MENDED	EST U							ped.	nance, CI = (
CONDITION		RECOM	WORK E							roved and develo	Deferred Mainte
DAM (	DAM:		ITEM1							1 Include only work items for which a FAMS unit cost has been approved and developed.	<sup>2</sup> Work Types are to be classified as: $A = Annual Maintenance$ , $D = Deferred Maintenance$ , $CI = Capital Improvement$ . <sup>3</sup> UOM = Unit of Measure.
	NAME OF DAM:		ITEM NO.							Include only	<sup>2</sup> Work Types <sup>3</sup> UOM = Uni

NAME OF DAM:	DATE INSPECTED:
REMARKS:	

Coordinator, Safety of Dams Signature	Date	
NAME OF DAM:		Date Inspected:
Photos:		

Insert description of photographs on this page. Identify the feature, item, or deficiency that is captured by the photograph, and identify the direction in which the photograph is taken; i.e., "Main embankment from the west abutment looking east." Add a text box for each photograph included. Provide additional photographs, as needed.

Date Inspected:		
Date		
Coordinator, Safety of Dams SignatureNAME OF DAM:	Photos:	

Insert description of photographs on this page. Identify the feature, item, or deficiency that is captured by the photograph, and identify the direction in which the photograph is taken; i.e., "Main embankment from the west abutment looking east." Add a text box for each photograph included. Provide additional photographs, as needed.

### **Appendix. Condition Rating Code:**

Numeral (0-9) and Descriptive Term (GOOD, POOR, etc.)<sup>1</sup>

N	Not	app	licab	le
		-  -		

- 9 EXCELLENT—No deficiencies.
- 8 VERY GOOD—No noticeable or noteworthy deficiencies that affect the condition or operation.
- 7 GOOD—Concrete surfaces have shrink cracks, light scaling, and insignificant spalling that does not expose reinforcing steel.
- 6 SATISFACTORY—Minor deterioration or initial disintegration, minor chloride contamination, cracking with some leaching, or spalling on concrete.
- 5 FAIR—Moderate deterioration or disintegration, extensive cracking and leaching, or spalling on concrete.
- 4 POOR—Major spalling, heavy scaling, wide cracks, or exposed rebar in concrete.
- 3 SERIOUS—Any condition described in code 4 that is excessive in scope.
- 2 CRITICAL—Advanced deterioration of primary structural elements.
- 1 "PARTIAL FAILURE"—Dam is out of service; or "IMMINENT FAILURE"—Dam will fail if not taken out of service.
- O FAILED—Dam has failed. Replacement of the entire structure is necessary.

Good (codes 7–9) Fair (codes 5–6)
Poor (codes 2–4) Unsatisfactory (codes 0–1)

\_

<sup>&</sup>lt;sup>1</sup> Condition Rating Codes are from Manual Handbook H-9177-1, Dam Condition Assessment Guidelines for Embankment Dams.

